



Sunshine Solar Limited Unit 30, Ashwellthorpe Industrial Estate Ashwellthorpe

Norwich Norfolk

**NR16 1ER** 

Tel: 01508 488 188

Opening Hours: Mon - Fri 9am - 5pm E-mail: sales@sunshinesolar.co.uk





www.sunshinesolar.co.uk

### **Kit Contents**

- 4 x Sunshine Solar Panels 120W 12V Monocrystalline
- 1 x MPPT Controllers 20A 12/24V
- 1 x 10m Solar Panel Extension Cable (4mm)
- 1 x 1m Extension Cable Controller to Batteries (6mm)
- 1 x Midi Fuse Holder & 20A Fuse (controller to batteries)
- 2 x 125Ah 12V AGM Deep Cycle Batteries
- 1 x Heavy Duty Battery Joining Lead
- Sunshine Power Inverter 1500W 24V Pure Sine Wave
- Power Inverter Wired Remote On/Off Switch

## **Solar Panel Specifications**

- Product Code. SSP120M
- Max Power. 120W ± 3%
- Max Power Voltage. 17.8V
- Max Power Current. 6.74A
- Open Circuit Voltage. 21.3V
- Short Circuit Current. 7.28A
- Normal Operating Cell Temp. -45 to 80°C
- Max System Voltage. DC1000V
- Weight. 8.25 kg
- Dimensions. 670 x 1115 x 35 mm



#### Important

When the Solar panels are exposed to light they will start to generate electricity, avoid shorting the cables together and do not touch the bare ends. The voltage of each solar panel may be relatively low, but still can cause a electric shock. When making the electrical connections best practice is to cover the solar panel to reduce the voltage and current. Consult the manufacturers instructions and applicable safety guidelines before fitting. This information is for guidance only, if you are unsure about any part please call us or seek professional help. Failure to adhere to these instructions may invalidate any warranty provided.

See our Terms and Conditions at www.Sunshinesolar.co.uk

1.

Thoroughly read all manuals and specifications before commencing. If you are unsure about any part seek professional help.

- 2.
- Connect the batteries together in series using the supplied battery joining cable. Connect the cable to the positive of the first battery and the negative of the second battery (see fig 1).
- 3.

Connect the power inverter cables to the power inverter and then to the battery bank, (see fig 1). Positive lead first then negative lead. Ensuring the correct polarity is observed (there maybe a spark on connection).

- 4.
- Mount the Solar controller as per the controllers instruction.
- 5.

Connect the solar controller to the battery bank observing the correct polarity, using the supplied inline fuse and cable.

- 6.
- Tightened all battery connections
- 7.

Mount the panels securely using a suitable mounting system, ideally in a south facing unshaded position.

- 8.
- Connect the panels together in series, positive of one panel to the negative of the next (see fig 1).
- 9.

Cover the panels and connect the extension cables (positive of one panel and negative of last panel) marking the positive lead to ensure correct polarity when connecting to the solar controller.

10.


Route the solar panels extension cables to the solar controller. Connect the cables to the solar controller ensuring the correct polarity is observed and uncover panels.

11.

Read the solar controller manual for user adjustments and data display.

# **Basic Wiring Diagram**

4 x 120W Solar Panels connected in series

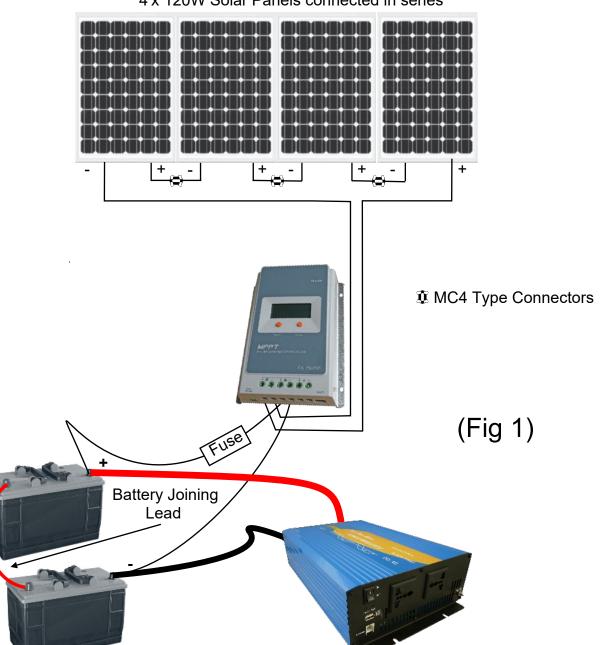

www.sunshinesolar.co.uk